

## Coolpad Surf HOTSPOT

 
### Coolpad Surf HOTSPOT Enstriksyon

Coolpad Surf Hotspot la TGH te bay ki servis nan Mobile Citizen.



1. Louvri kouvèti a dèyè pou tcheke si batri a enstale ak jwenn enfòmasyon Wifi ou.

- Vire hotspot a fè fas a desann.
- Jwenn dan an sou kwen anba men gòch (Gade egzanp lan nan foto a).
- Sèvi ak zong ou oswa yon objè plat pou detache kwen kouvèti a.
- Lè sa, leve rès nan kouvèti a pou lage li.

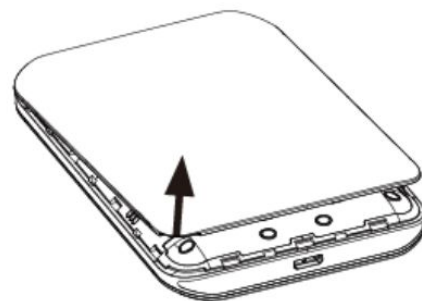


2. Tcheke si batri ou enstale. Si li pa, enstale li kòm foto.

3. Jwenn enfòmasyon Wifi ou sou anedan kouvèti dèyè a.

Sou yon moso papye ekri

 - SSID la (non wifi ou)
- Ak modpas la

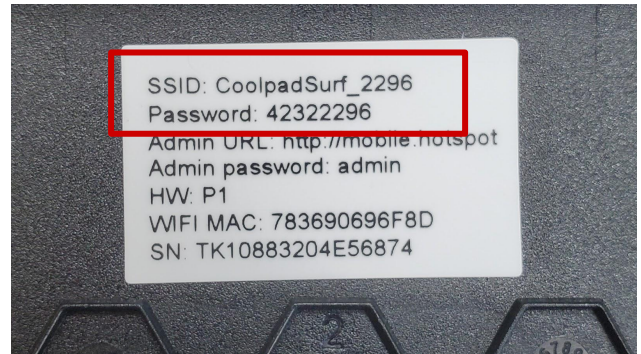


4. Lè ou fini, mete kouvèti a tounen sou hotspot ou.

5. Konekte kòd microUSB la nan pò USB a nan pati anba nan aparèy ou an. (Gade egzanp lan nan foto a sou bò dwat la)

6. Konekte lòt bout la nan adaptè a.

7. Konekte adaptè a nan yon plòg ak konplètman chaje hotspot ou an.

 8. Lè li konplètman chaje dekonekte kòd chaje ou.

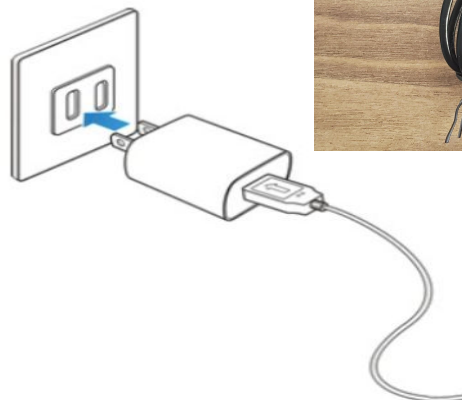



9. Pou ouvri hotspot a peze epi kenbe bouton an pouwa pou 3 (twa) segonn.



 
10. Lè hotspot ou a pare pou sèvi ak li ou ta dwe wè limyè vèt.


11. Kounye a ou kapab konekte konpitè w lan, tablet ak telefòn nan siyal wifi sa.

12. Nan paj kap vini an nou pral eksplike kouman ou li endikatè yo.



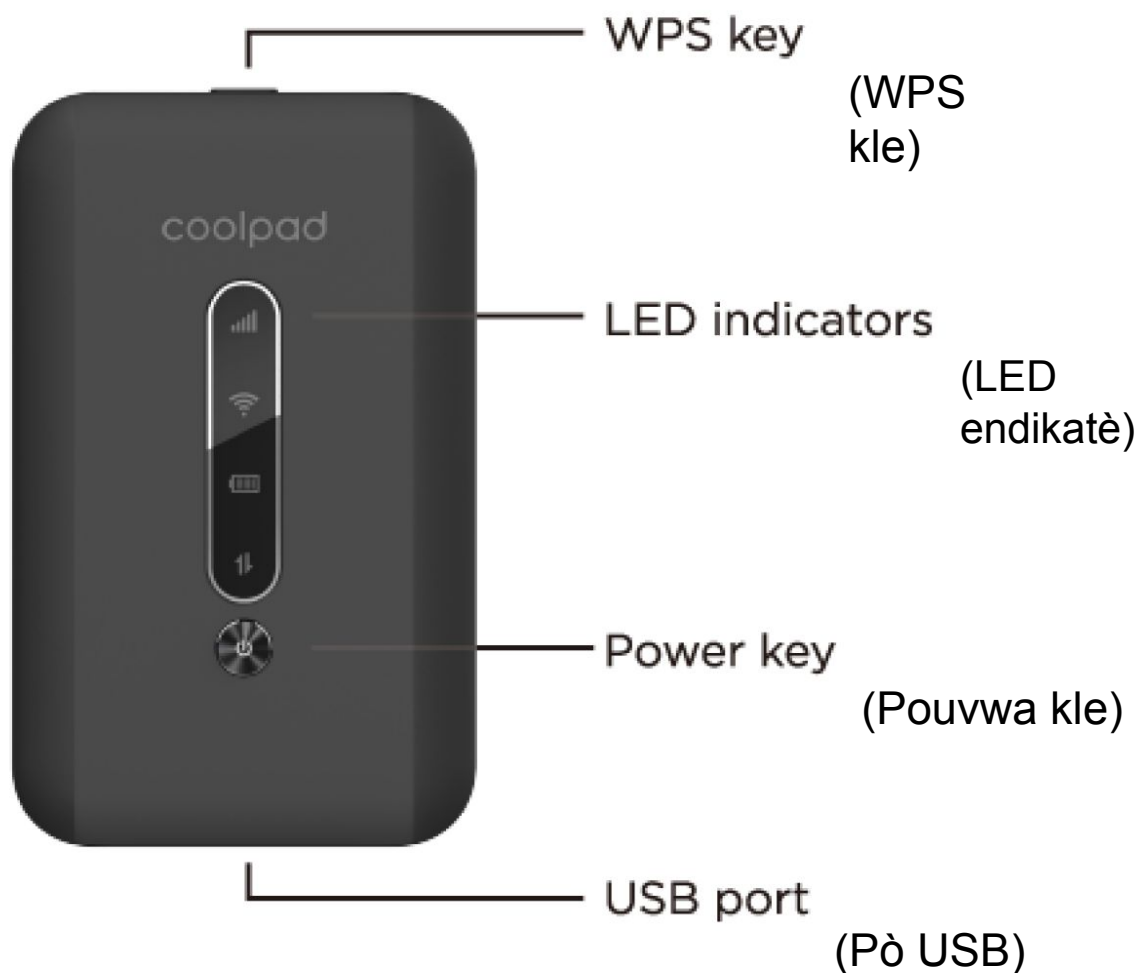

# Endikatè yo



 **Network:** Ikòn Rezo a montre estati rezo w lan. Yon limyè vèt vle di ou gen yon bon koneksyon. Yon limyè jòn vle di ou gen yon koneksyon entènèt pòv. Yon limyè wouj vle di ou pa gen okenn koneksyon entènèt oswa pa gen sèvis.

 **Wi-Fi:** Ikòn Siyal Wifi a limen lè ou konekte.

 **Battery:** Icon Batri a montre nivo batri ou. Yon limyè vèt solid vle di nivo batri a se 40-100% (karant a san pousan). Yon limyè solid jòn vle di batri a se nan 16-39% (sèz a trant nèf pousan). Yon limyè wouj solid vle di batri ou a se mwens pase 15% (kenz pousan). Lè otspo a chaje limyè a pral klere wouj lè nivo batri a anba 15% (kenz pousan), oswa li pral klere jòn si nivo batri a se 16% -39% (sèz a trant nèf pousan) oswa flash vèt lè nivo batri a se 40% -100% (karant a san pousan).

 **Data:** Ikòn done a pral vèt lè hotspot ou an telechaje ak done ou pou ale ak pou soti nan hotspot ou an. Li ka flache.

\*Pou pwoblèm ak sèvis ou ka rele **1-877-216-9603** oswa mesaj yo nan sit entènèt yo nan <https://mobilecitizen.org/about/contact-us/>