


Konnen Chromebook ou a

Ki sa yon Chromebook ye?

Yon Chromebook se yon laptop ki kouri sou eksplwatasyon Chrome Google la (olye pou yo Windows oswa Mac). Machin sa yo fèt yo dwe itilize sitou pandan y ap konekte ak entènèt la, epi yo vin chaje ak tout Google Apps yo.

Premyèman, mete kanpe Chromebook ou!

1. Pran Chromebook ou a soti nan bwat la epi peze bouton pouvwa a pou vire l.
2. Ou pral wè yon ekran akeyi.
3. Klike sou bouton “English (United States)” pou chwazi lang ou prefere a.

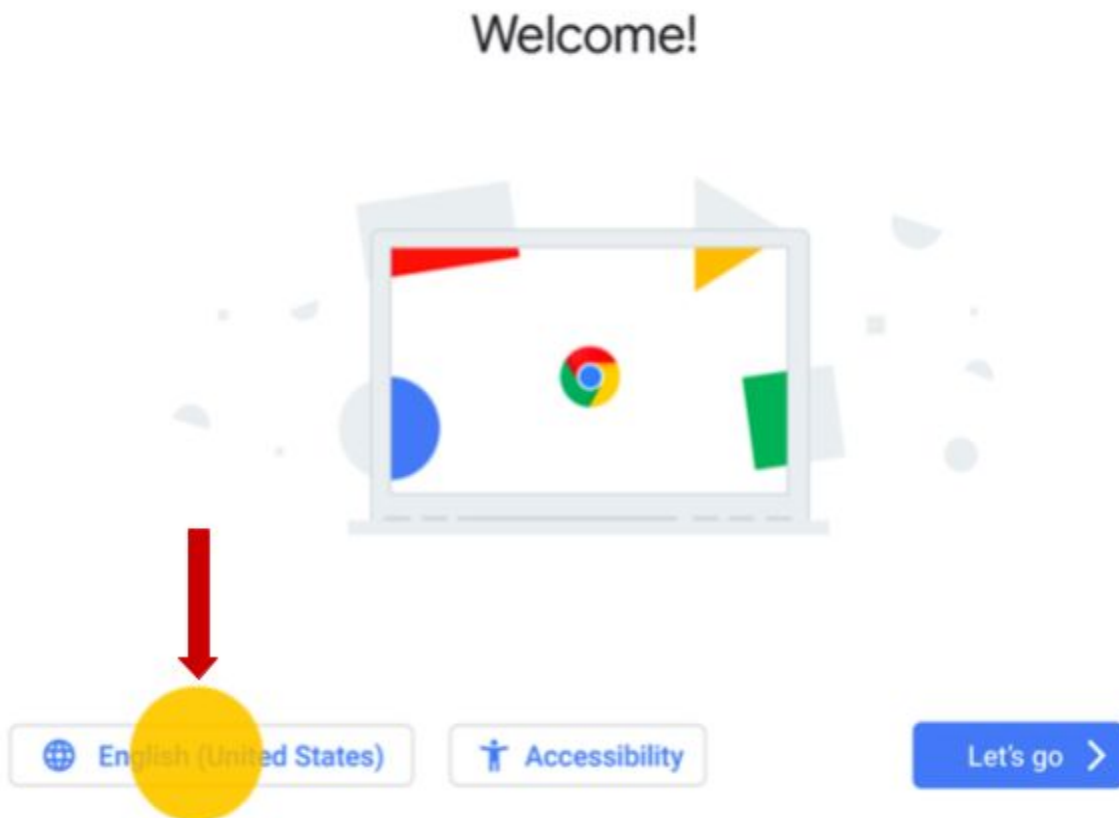


4. Chwazi lang ou prefere a klike sou meni gout la.
5. Lè sa a, klike sou "OK".

Choose your language & keyboard


Language  English (United States) ▼

Keyboard US ▼

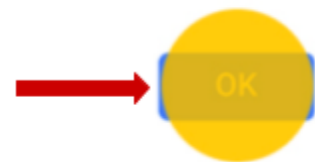

6. Si ou vle: Pou vire sou Chromebook karakteristik aksè, chwazi "Accessibility".

Welcome!

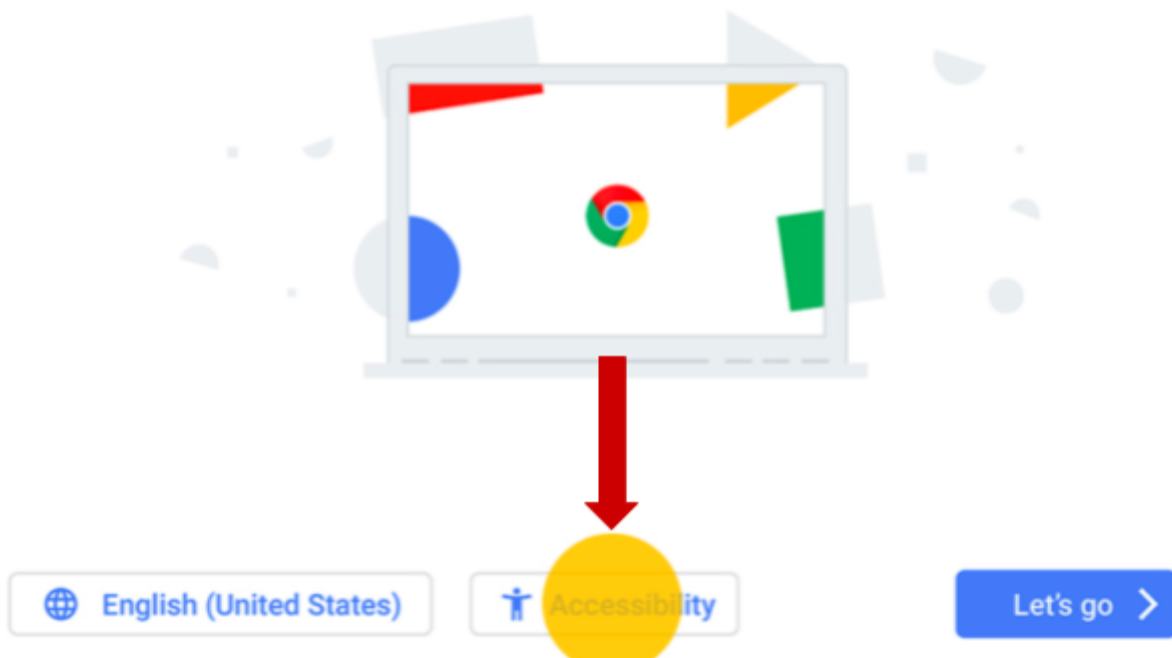

7. Chwazi karakteristik aksè ou ta renmen itilize yo. Lè sa a, chwazi OK.

Accessibility Settings

You can customize this device to fit your needs. These accessibility features can be changed later in Settings.

ChromeVox (spoken feedback)
Off

Large mouse cursor
Normal

High contrast mode
Off

Screen magnifier
Off

Select to speak
Off

Click the buttons to turn any of these options on.

OK

Detailed description: This image shows a list of five accessibility settings, each with a toggle switch to its right. The settings are: ChromeVox (spoken feedback) - Off; Large mouse cursor - Normal; High contrast mode - Off; Screen magnifier - Off; and Select to speak - Off. A red arrow points to a yellow circle with 'OK' written on it, which is positioned below the list of settings.

8. Chwazi "Let's go".

English (United States) Accessibility Let's go

Detailed description: This image shows a stylized illustration of a laptop. On the laptop screen, there is a Chrome logo in the center, surrounded by various colored shapes (red, yellow, blue, green). Below the laptop, there are three buttons: 'English (United States)' with a globe icon, 'Accessibility' with a person icon, and 'Let's go' with a right-pointing arrow. A red arrow points down to the 'Let's go' button, which is highlighted with a yellow circle.

9. Chwazi rezo wifi ou, tape modpas ou epi chwazi Next.

Connect to network

To restore your data, you need an internet connection

 HOME

 GUEST

 Back

Next



10. Revize tèm Google Chrome OS yo. Lè sa a, chwazi “Accept and continue”.

Google Chrome OS terms

Google Chrome OS Terms

BY USING THIS DEVICE, YOU AGREE TO BE BOUND BY THE FOLLOWING TERMS.

The Chrome OS device provided to you includes Chrome OS software such as the operating system executable code, embedded software, firmware, fonts, and other data, including any updates (referred to collectively as the “Software”). These Terms apply to the Software and your use of the Software with your Chrome OS device. Most source code for Google Chrome is available free of charge under an open-source software license agreement at <http://www.chromium.org>.

1. Your relationship with Google



System security setting



Optional: Help make Chrome OS better by automatically sending diagnostic and usage data to Google. [Learn more](#)

 Back

Accept and continue



11. Antre nan adrès imel kont Google ou epi chwazi Next.



Sign in to your Chromebook

Email or phone
drewbrunsman@gmail.com

Forgot email?

More options

Next

12. Antre modpas ou epi chwazi "Next".



Welcome

drewbrunsman@gmail.com

Email or phone
.....

Forgot password?

Next

13. Pou senk anviwònman Chrome ou chwazi "Accept and continue".



Chrome sync

Your bookmarks, history, passwords, and other settings will be synced to your Google Account so you can use them on all your devices.




Personalize Google services

Google may use your browsing history to personalize Search, ads, and other Google services. You can change this anytime at myaccount.google.com/activitycontrols/search

Review sync options following setup


Accept and continue

14. Chromebook ou a mete kanpe ak ouvri sesyon an ak adrès imel ou. Bookmarks, ekstansyon, ak apps ki konekte nan kont Google ou ap parèt otomatikman.

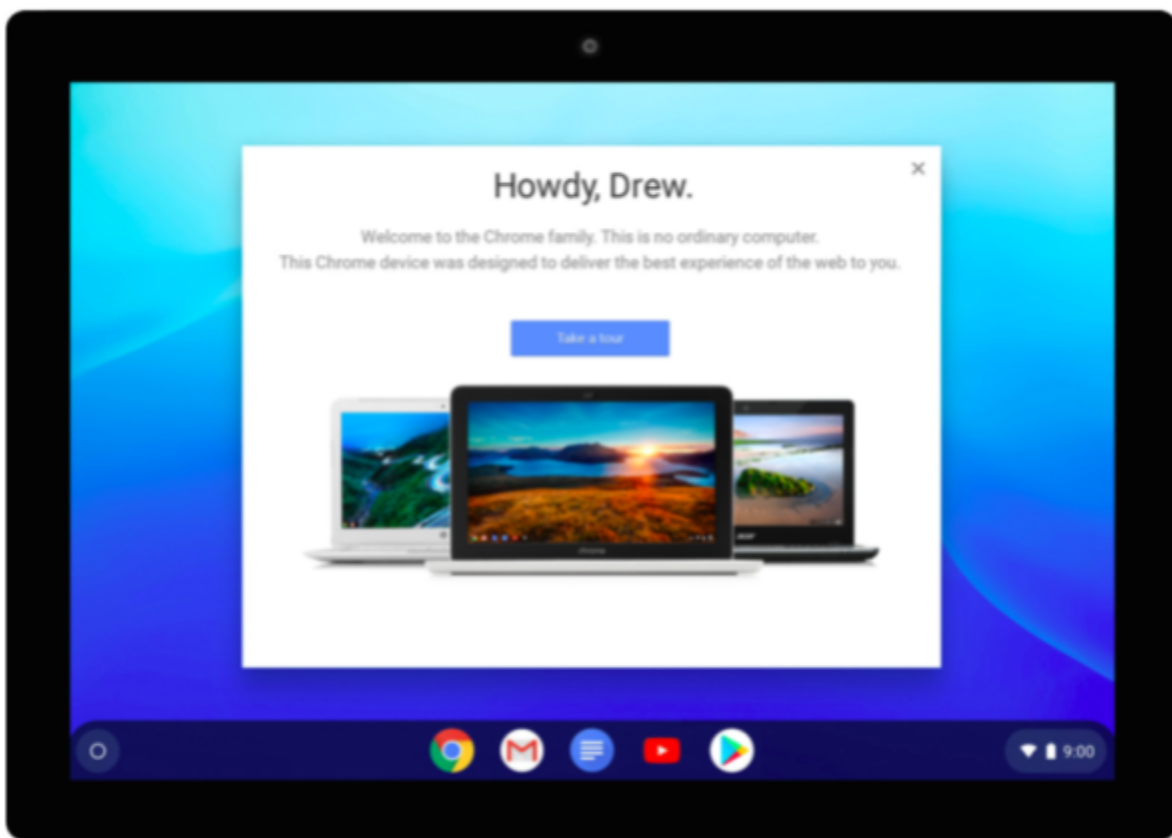


Next, kite a gade nan kèk anviwònman!


1. Se panèl la anviwònman kache. Klike sou revèy la nan kwen anba men dwat nan ekran an fè li pòp moute.

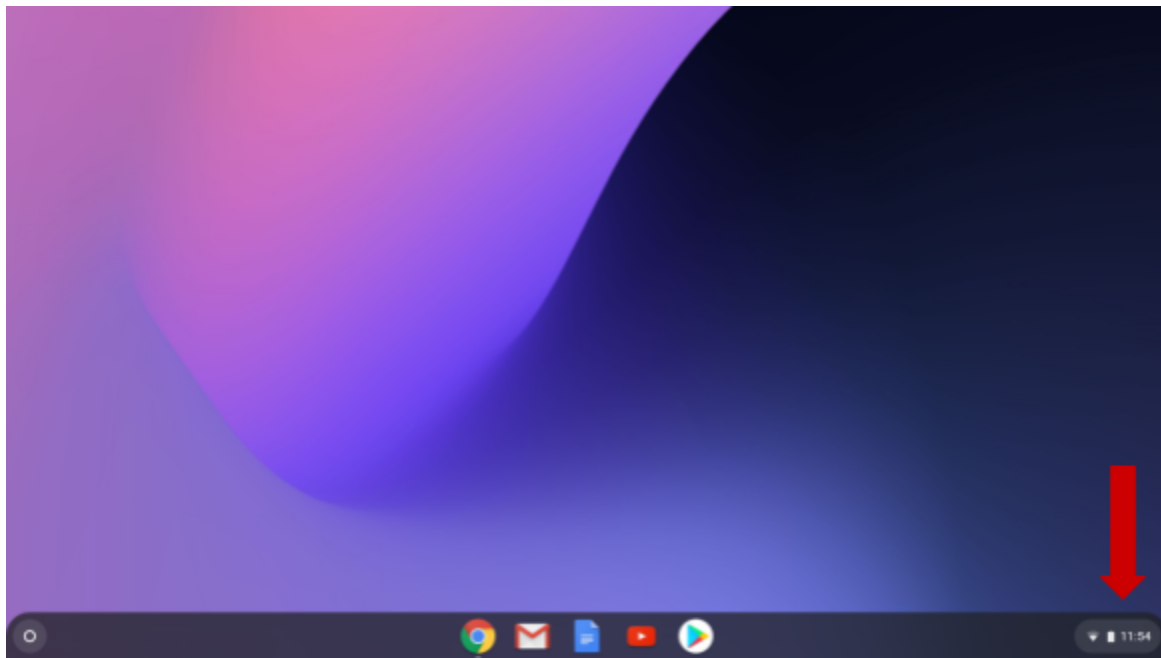


2. Soti nan panèl la anviwònman ou ka byen vit ajiste kèk nan anviwònman ou yo. Klike sou ikòn lan pou vire anviwònman an sou oswa etenn.

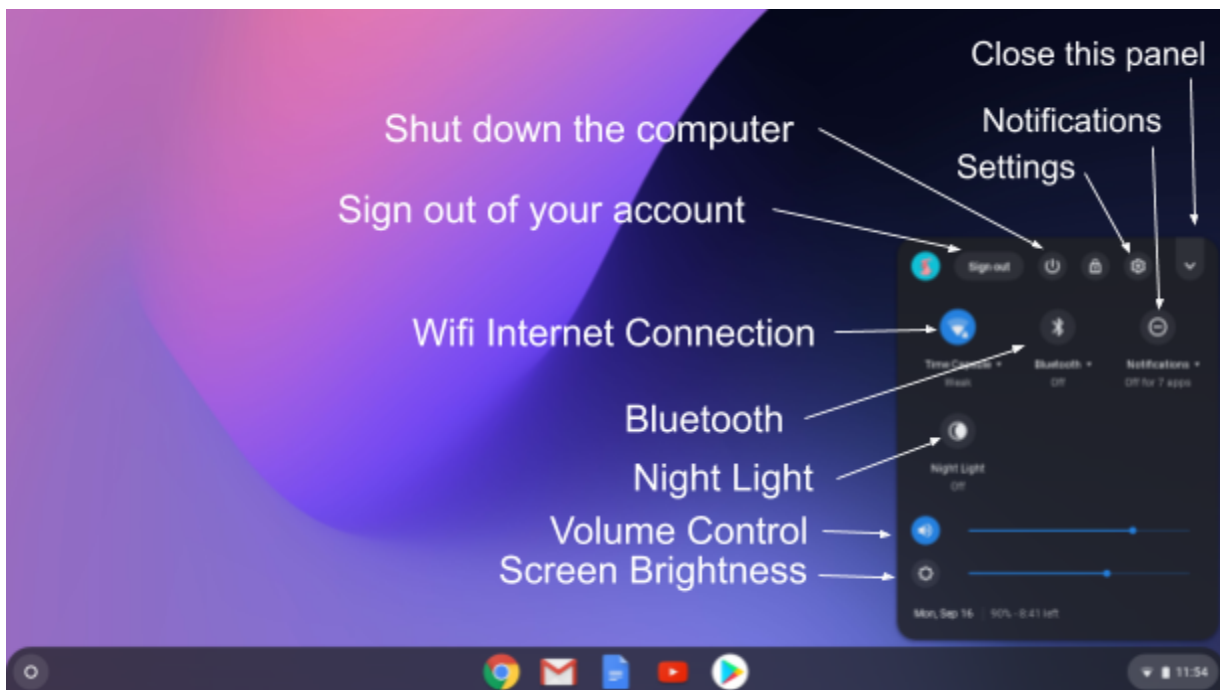


3. Pou ajiste plis anviwònman ak opsyon sou Chromebook ou klike sou ikòn anviwònman an. Ann chanje photo ou (background). Klike sou bouton anviwònman an.

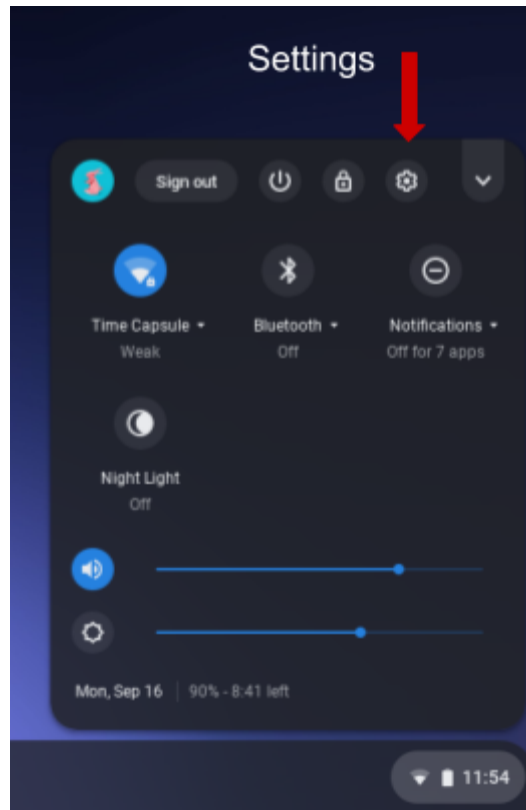

4. La a ou pral wè yon lis anviwònman sou meni an bò gòch. Pou chanje photo a klike sou "Appearance".

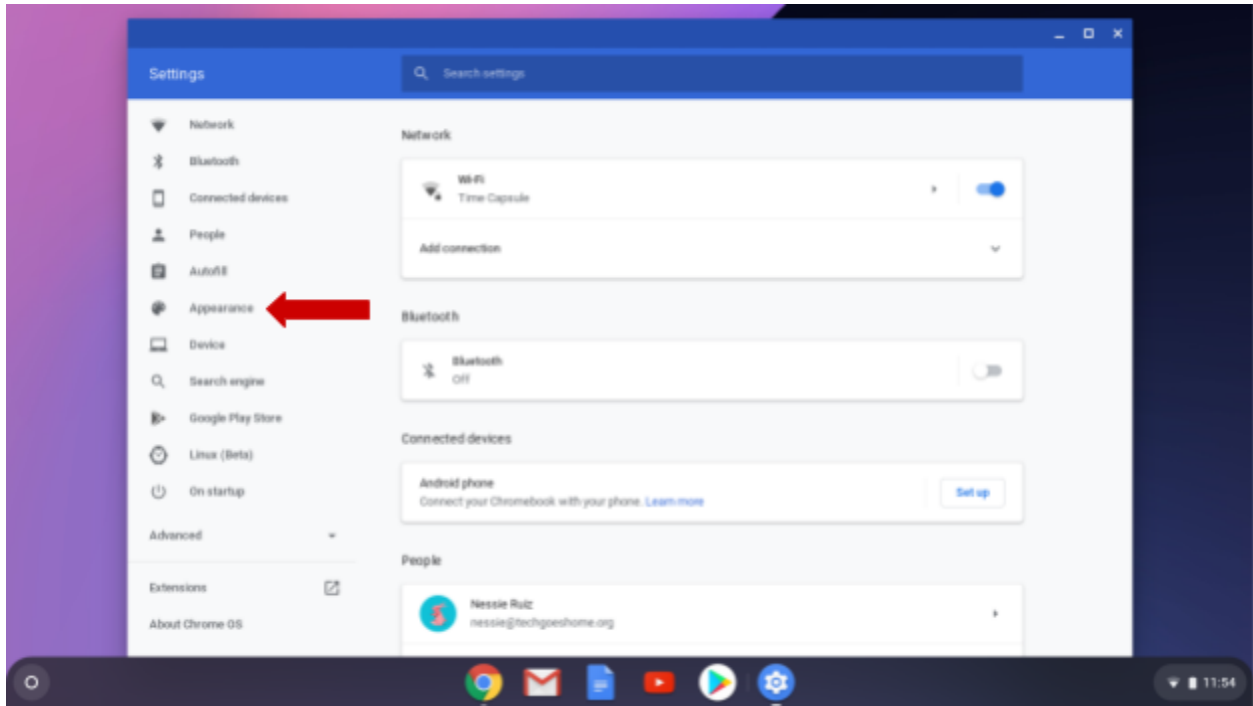


5. Klike sou "Wallpaper"

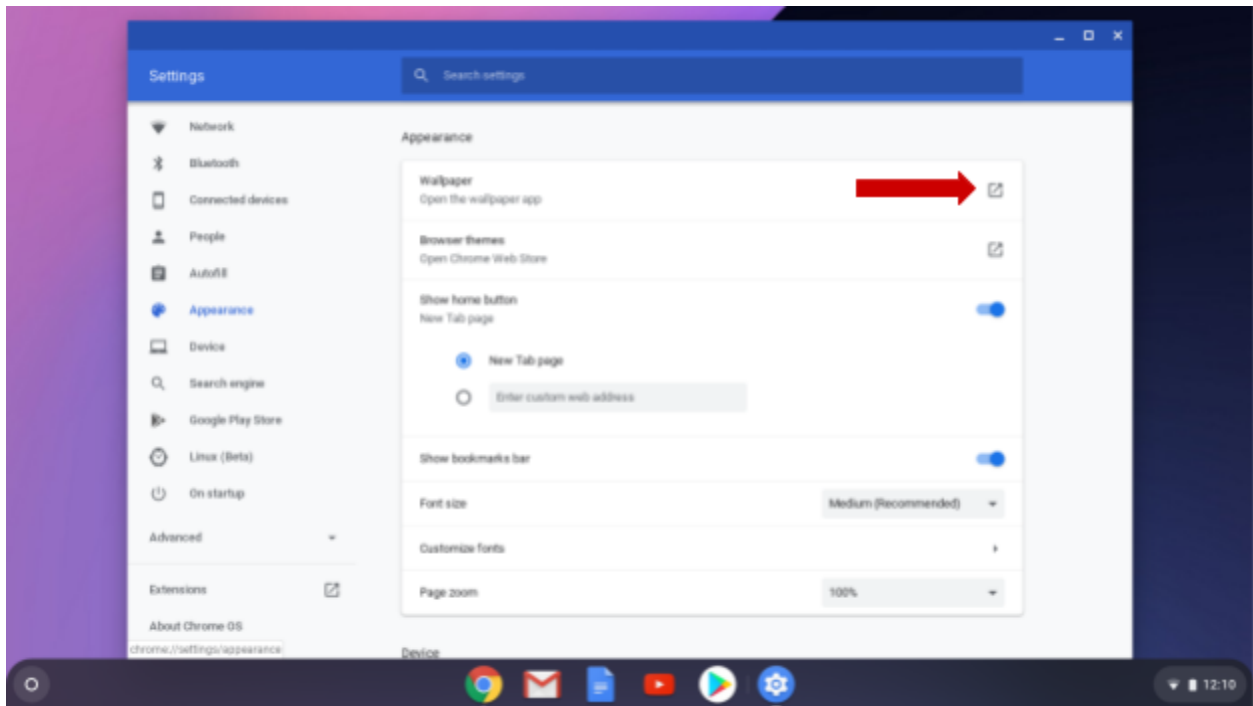


6. Gade nan imaj yo nan chak kategori.




7. Koulye a, chwazi yon imaj ou vle itilize pa klike sou li. Papye miray la pral chanje touswit. Eseye anpil jan ou renmen!

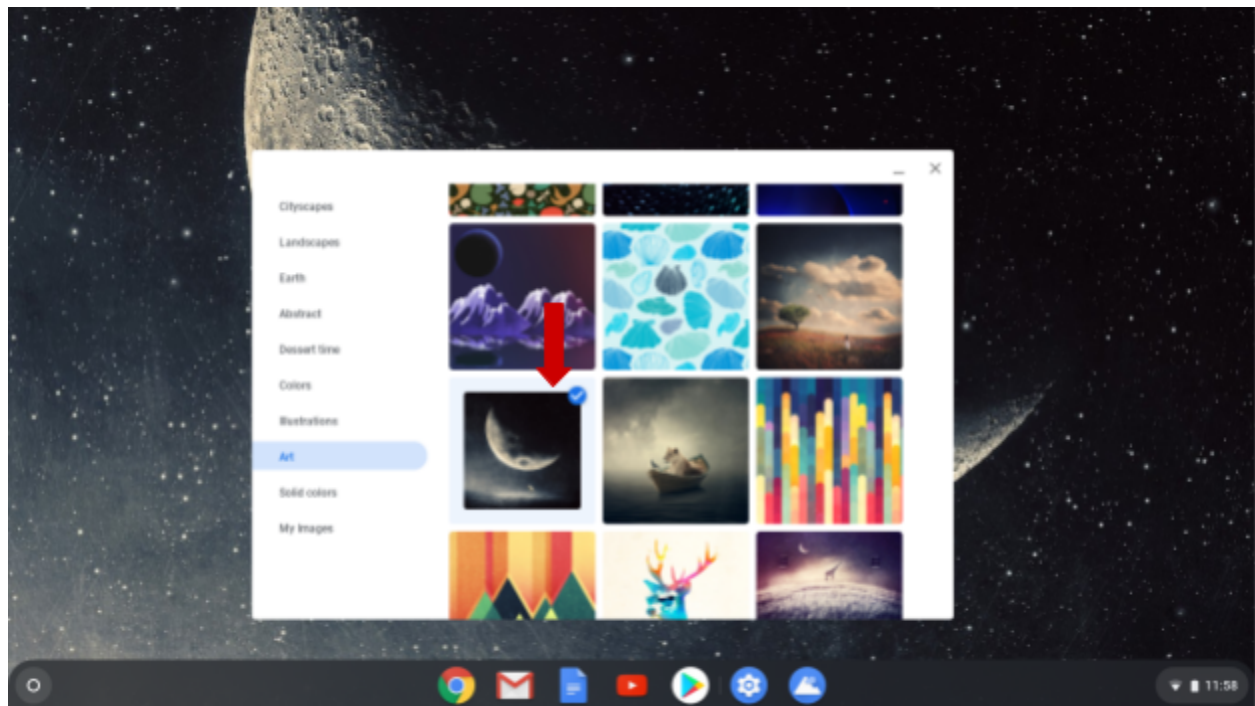

8. Koulye a, klike sou X la sou kwen an tèt dwat yo fèmen opsyon yo photo. Remak: X la nan kwen an tèt dwat nan nenpòt ki fenèt ap fèmen fenèt la

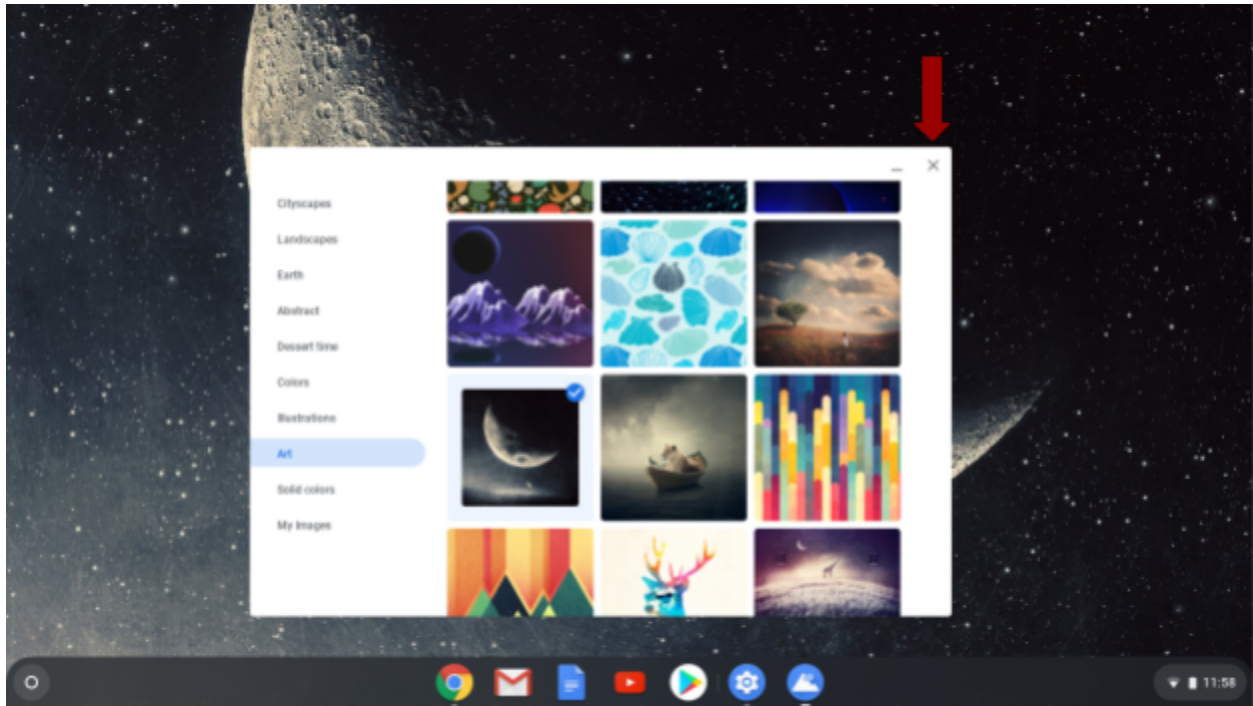


9. Ou pral mennen l 'tounen nan meni an anviwònman kote ou ka eksplòre lòt opsyon. Klike sou diferan kategori yo pou wè ki opsyon ki disponib. Sonje pou peze X pou fèmen fenèt anviwònman an lè ou fini.

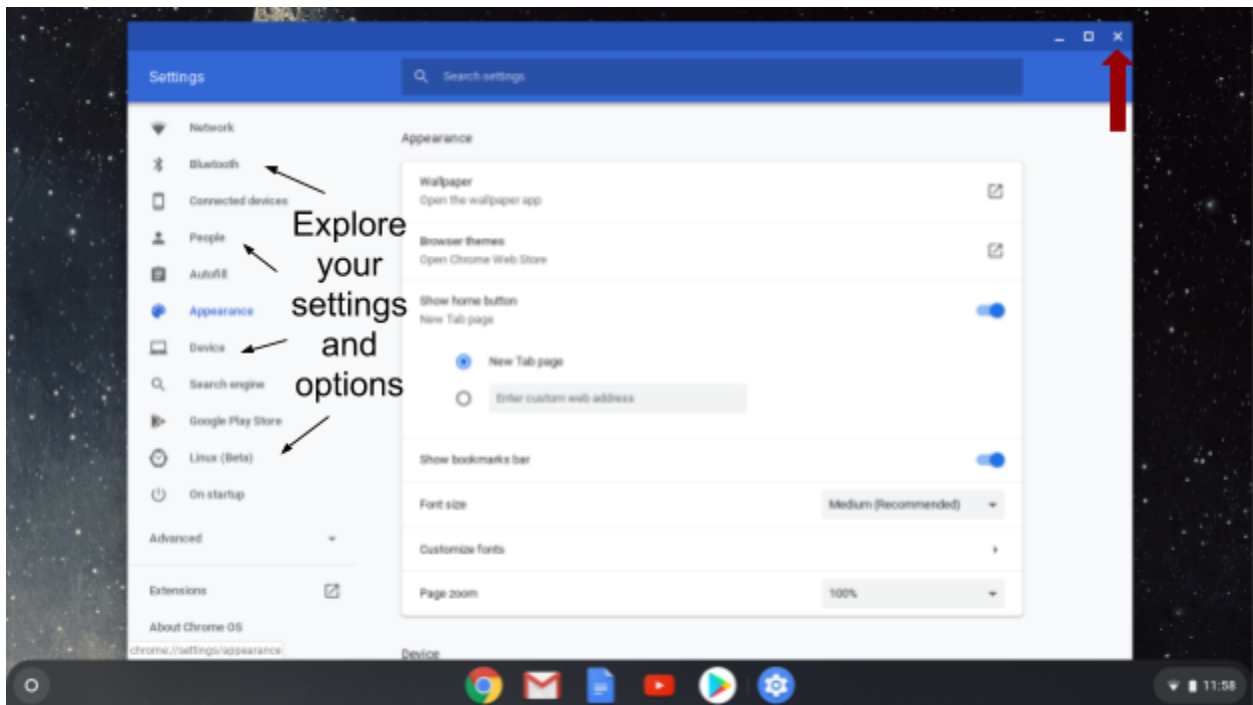

10. Koulye a, kite a gade nan apps ou! Klike sou lanseur nan kwen gòch anba ekran ou an.



11. Lanse a pral kounye a montre w yon ba rechèch ke ou ka itilize pou fè rechèch pou anyen sou òdinatè ou oswa entènèt la. Li pral montre w tou dènyèman ou itilize apps yo. Pou wè tout nan apps ou klike sou flèch la leve.

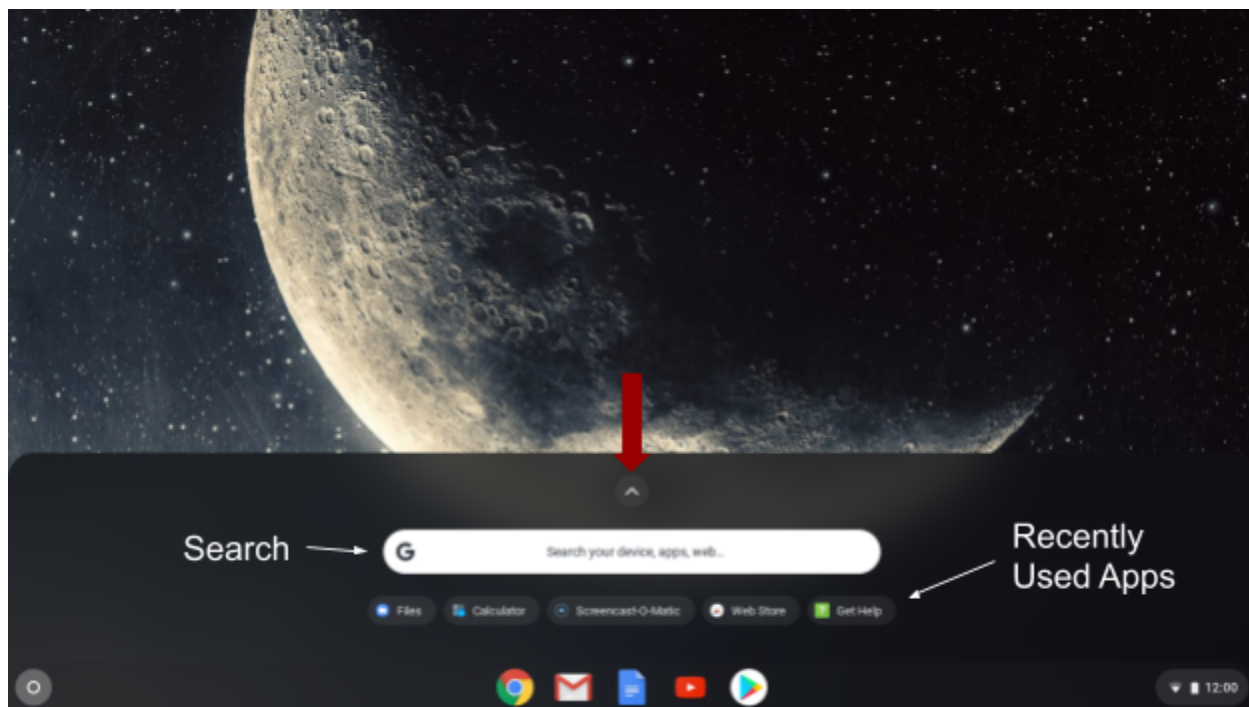


12. Koulye a, ou ka wè plis apps. Klike sou pwen yo sou bò gòch la yo wè menm plis apps.



13. Pou wè dosye ou yo klike sou ikòn Dosye yo.




14. Klike sou “My Files” yo wè dosye sove sou chromebook ou a. Klike sou Google Drive yo wè dosye yo sove la. Double-klike sou oswa tape dosye a oswa katab ou ta renmen louvri.

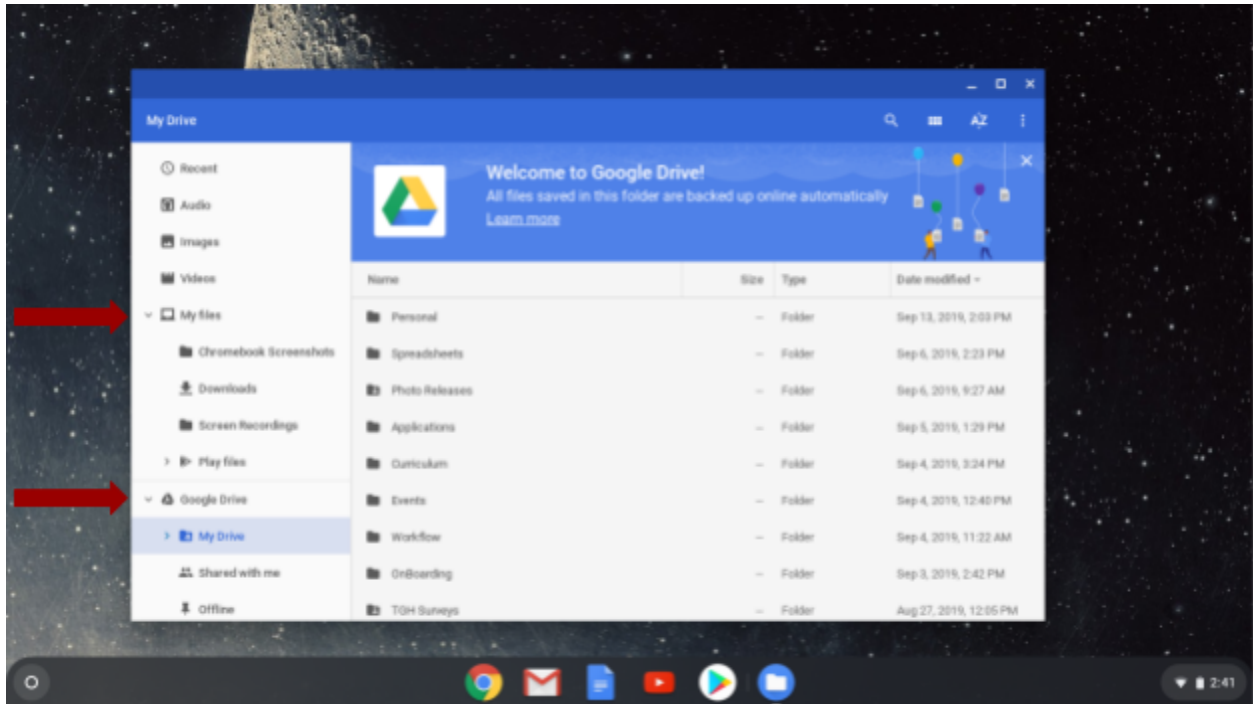


15. Sonje siyen soti nan kont ou si w ap pataje chromebook la ak lòt itilizatè! Lè ou siyen soti lòt moun pa yo pral kapab jwenn aksè nan dosye ou ak imèl.



16. Lè ou siyen soti ou pral sou paj prensipal la louvri sesyon an. Soti nan paj sa a yon lòt moun ka itilize chromebook ou kòm envite. Yo pa pral gen aksè a dosye ou.

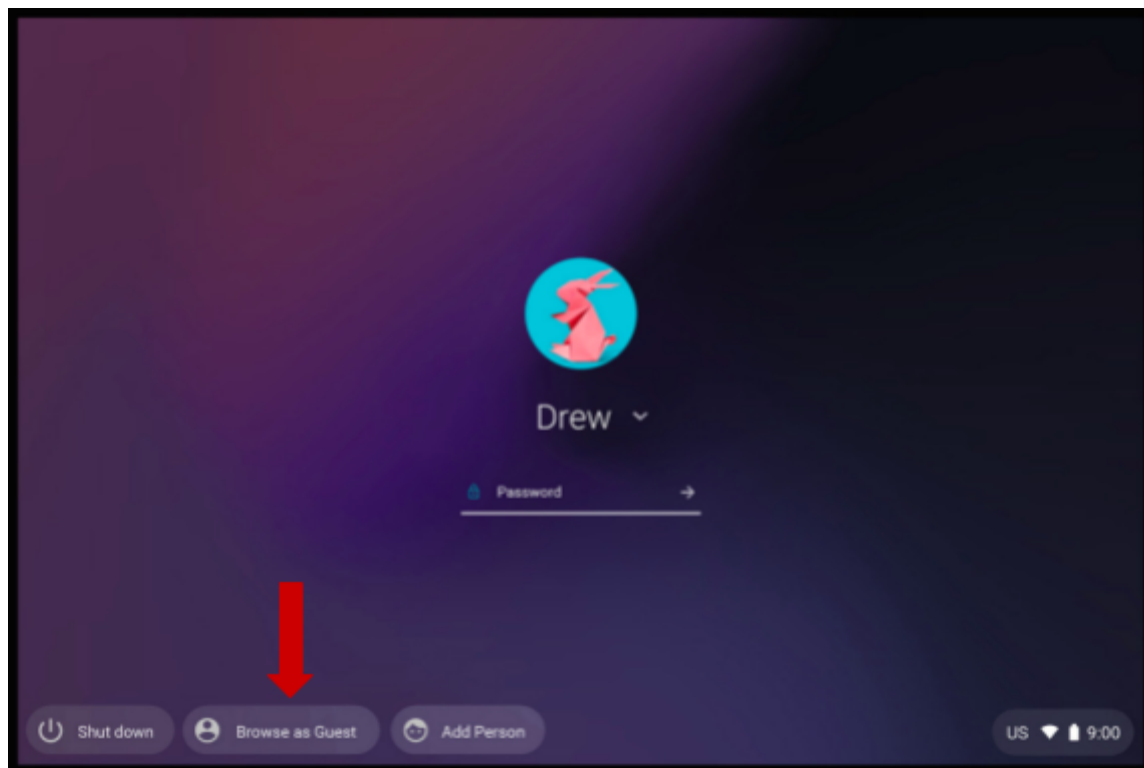

17. Si w ap pataje chromebook ou ou ka ajoute tou yon itilizatè pa klike sou “Add Person”. Yo pral mande yo ouvri sesyon an ak adrès Gmail yo. Ou ka ajoute plizyè moun epi chak moun ap gen aksè a dosye yo ak Imèl yo sèlman.

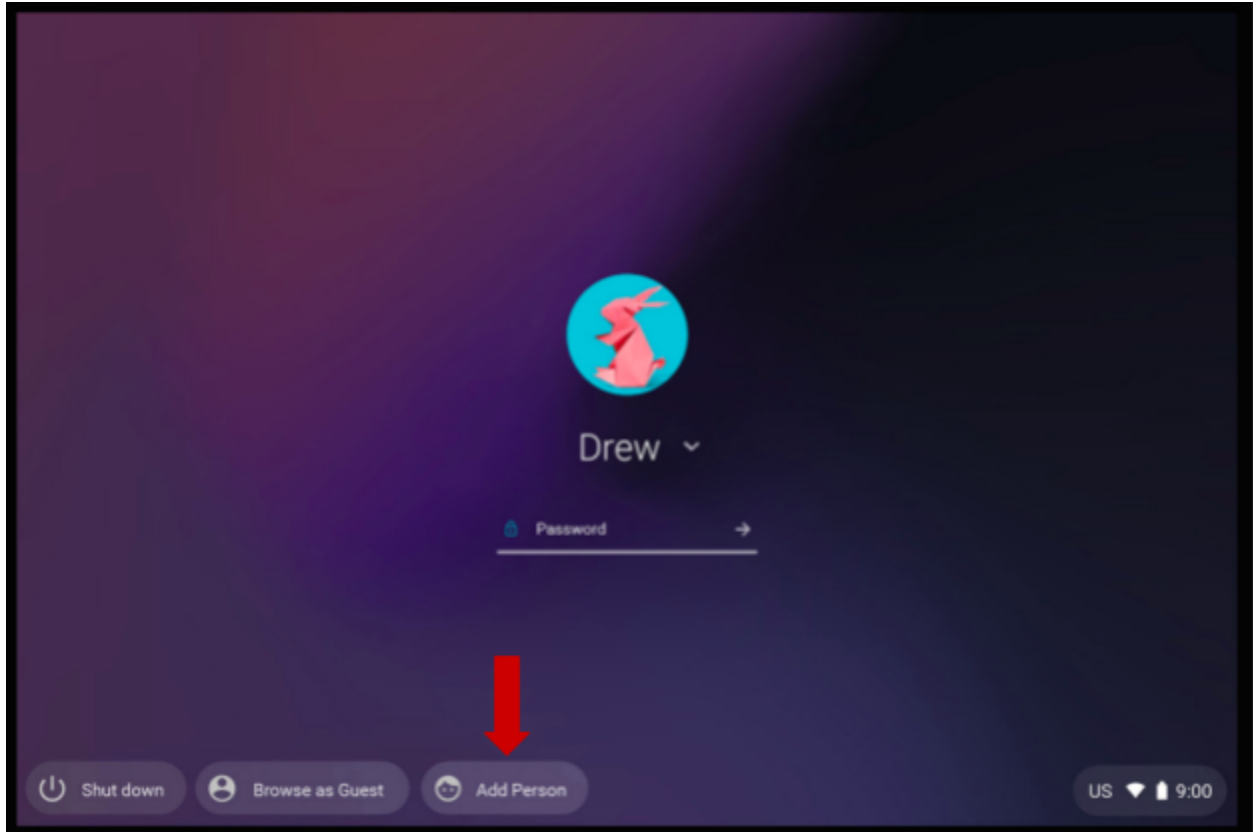

18. Si ou gen plis kesyon sou lè l sèvi avèk òdinatè w lan ou ka vizite

19. [Google's Chromebook Simulator](#) pa klike sou [lyen sa a](#) oswa tape

<https://partnerdash.google.com/apps/simulator/chromebook> nan ba rechèch ou an.

Konpliman pou yo te tout mete kanpe sou nouvo chromebook ou!